



1 1/2" Flat Polish

S1

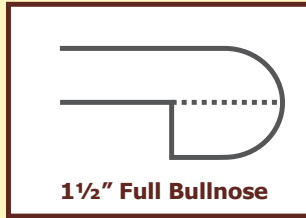


1 1/2" Full Bullnose

S2

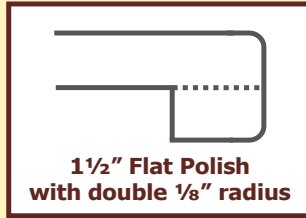


1 1/2" Flat Polish with double 1/8" radius

S3

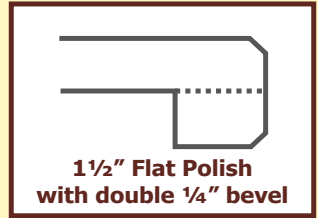


1 1/2" Flat Polish with double 1/4" bevel

S4

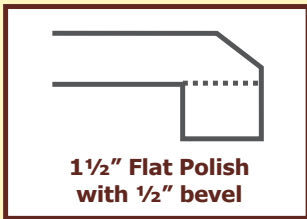


1 1/2" Flat Polish with 1/2" bevel

S5

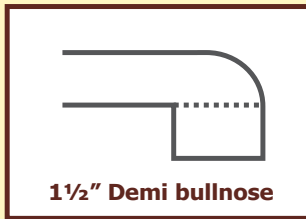


1 1/2" Demi bullnose

S6

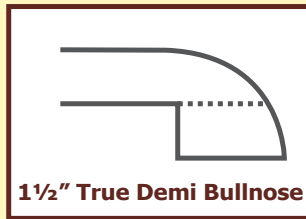


1 1/2" True Demi Bullnose

S7

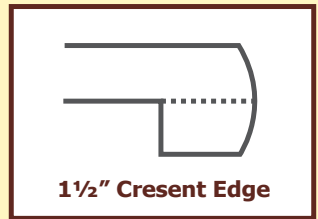


1 1/2" Crescent Edge

S8

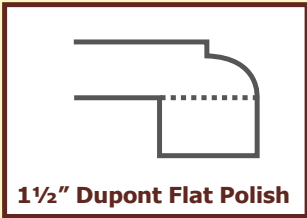


1 1/2" Dupont Flat Polish

D1

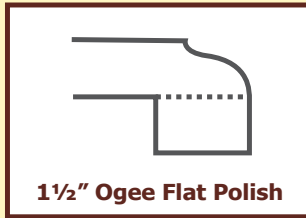


1 1/2" Ogee Flat Polish

D2

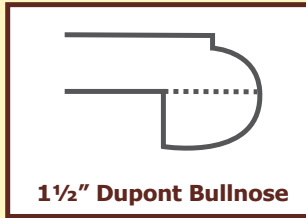


1 1/2" Dupont Bullnose

D3

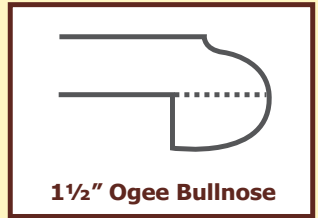


1 1/2" Ogee Bullnose

D4

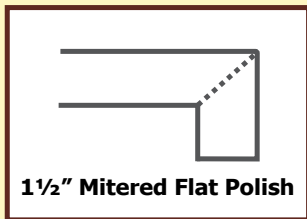


1 1/2" Mitered Flat Polish

D5

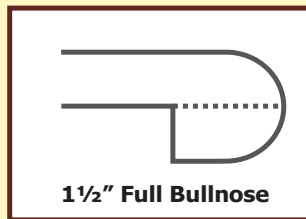


1 1/2" Full Bullnose

S2

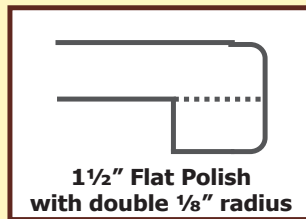


1 1/2" Flat Polish with double 1/8" radius

S3

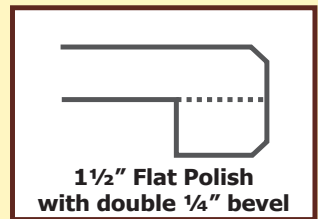


1 1/2" Flat Polish with double 1/4" bevel

S4

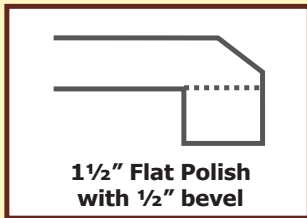


1 1/2" Flat Polish with 1/2" bevel

S5

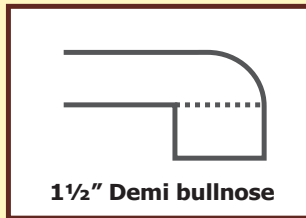


1 1/2" Demi bullnose

S6

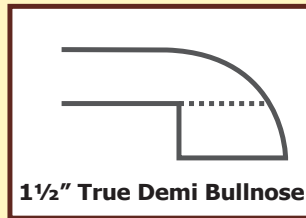


1 1/2" True Demi Bullnose

S7

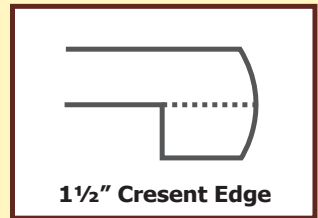


1 1/2" Crescent Edge

S8

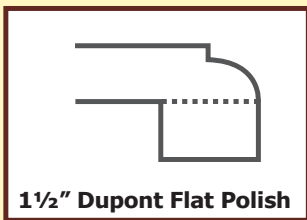


1 1/2" Dupont Flat Polish

D1

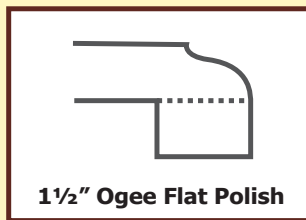


1 1/2" Ogee Flat Polish

D2

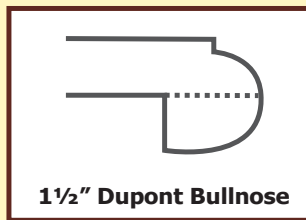

1 1/2" Dupont Bullnose

D3

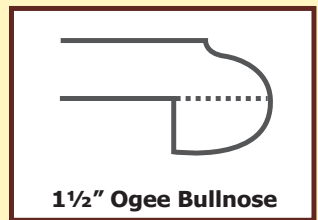

1 1/2" Ogee Bullnose

D4